

MEGA ***Light***®

LED Prefocus Profile LECO-200



Manual

DMX
512

RDM

DIM
4
Dimming
Curves

MASTER
SLAVE

STROBE

COB
LED

CE

00
Flicker
Free
QUALIFIED
FILM & TV



LECO-200

LED Profile Light

1.Packing List




2.Measurements

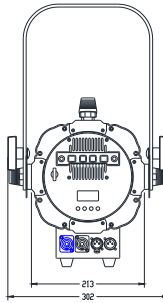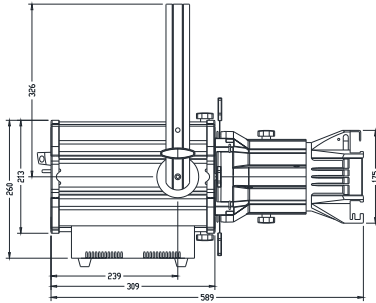


Unit: mm

3.Wiring Diagram

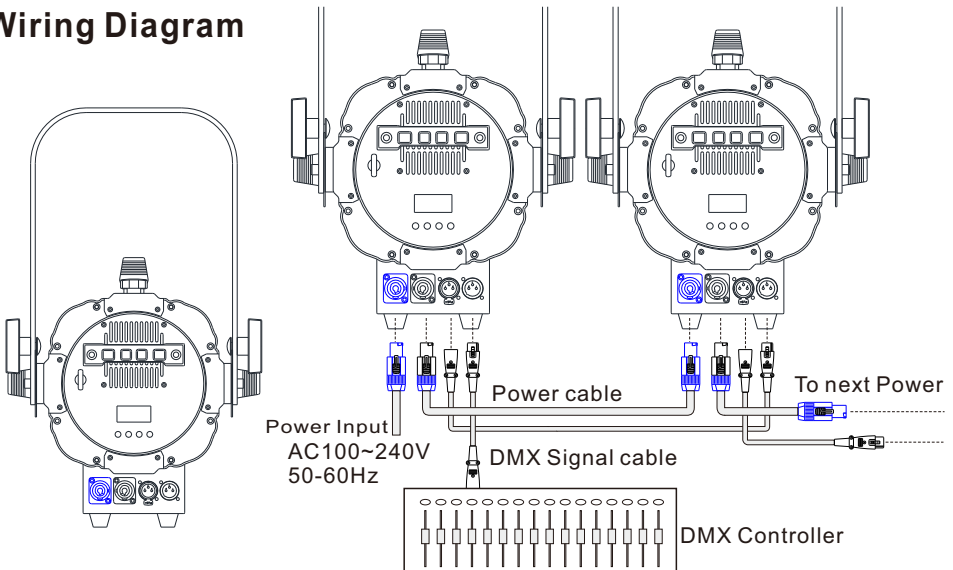

4.Illumination Diagram

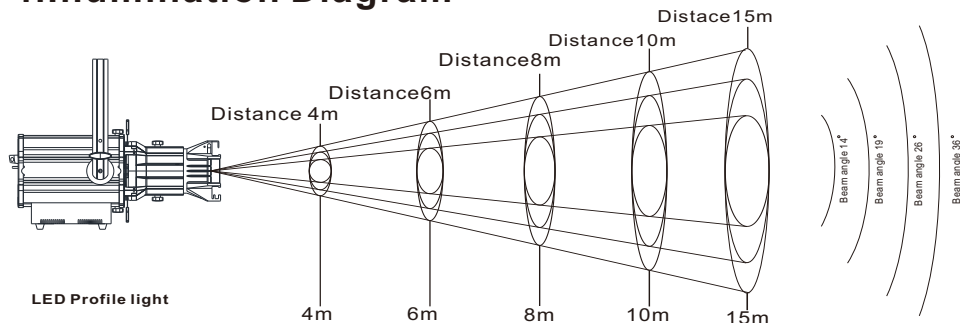


Illumination Center/Lux	9564	4232	2365	1468	706	3200K	Beam angle 14°
	9934	4452	2545	1649	817	6500K	
Beam Diameter/cm	98	147	196	246	344		

Illumination Center/Lux	5003	2462	1338	870	415	3200K	Beam angle 19°
	5150	2591	1456	959	496	6500K	
Beam Diameter/cm	124	180	248	315	487		

Illumination Center/Lux	3013	1312	725	437	211	3200K	Beam angle 26°
	3164	1456	834	549	283	6500K	
Beam Diameter/cm	185	277	370	462	646		

Illumination Center/Lux	1224	483	256	169	89	3200K	Beam angle 36°
	1354	579	335	242	129	6500K	
Beam Diameter/cm	368	503	693	900	1400		



■ DMX 4 channels

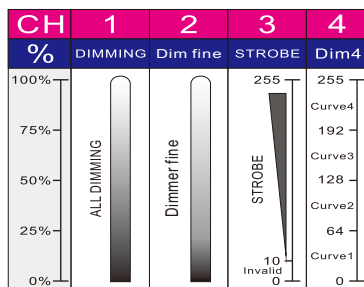

6. Technical parameters


LED Source	1xCOB 200W LED (3200K or 6500K) ,CRI>95
Optical group	Beam angle :14° (Bean angle 19° ,26° ,36° available) with high-efficiency optical system
Control	4DMX channels;LCD display+4 soft keys;4 selectable dimming curves
Connection	Powercon In & Out; 3-pole DMX In & Out (5-pole DMX available)
Voltage	Electronic full-range AC100-240V 50/60Hz
Max Power	200W
Measurements	Size: 60X30X26cm Weight: 11Kg

7. Control Panel

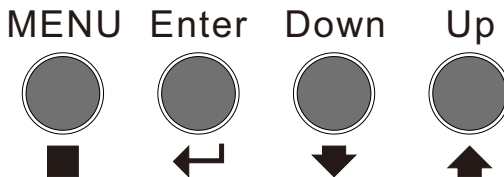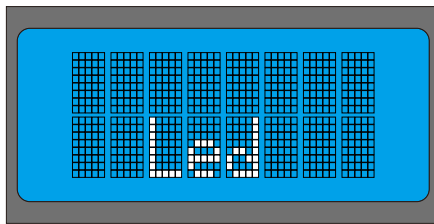

- Adjust keys function on panel
- Press “MENU” --->Display first-level menu--->
Press “Enter” --->Display second-level menu--->
Press “Down” & “Up” to adjust relevant function--->
Press “Enter” and “MENU” to quit current menu--->
Press “MENU” --->To next first-level menu...

8.Menu

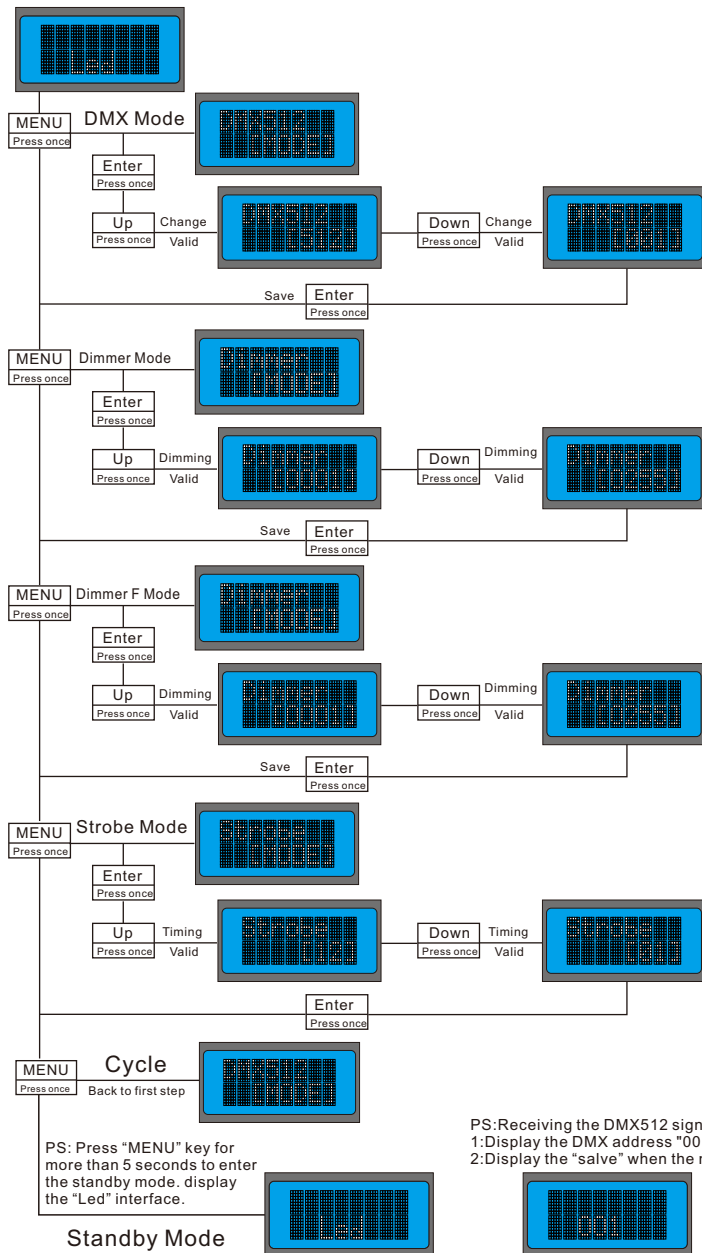

9.Function

 
 
■ Standby Mode (as below)






PS:Receiving the DMX512 signal and receiving the master signal.

1:Display the DMX address "001" when the DMX512 signal is received.

2:Display the "salve" when the master signal is received.






■ DMX Mode

   




DMX Address Allocation: 001-512

   ■ Dimmer Mode






Brightness adjust: 0001-0255 Dimming

   ■ Dimmer F Mode



Brightness adjust: 0001-0255 Dimming

   ■ Strobe Mode



Strobe/Speed : 01-12

 
■ Master/Slave Setting:

1, Master: Dimmer/Dimmer F /Strobe Mode


2, All Salves: Standby mode (as below)

PS:Long press MENU key for more than 5 seconds

to enter the standby mode. display the "Led" interface.



 :Display the "salve" when the master signal is received.



10.Notes
